

## Setting up IC 6.1 for IBM V1.6.2.5

Copy the run files into your working directory (note the period at the end of the command):

```
cp -R /opt/cadence/designKits/setupFiles/IBM_1.6.2.5_IC614/ .
```

Switch into the IBM directory you just copied:

```
cd IBM_1.6.2.5_IC614/
```

Setup your environment (everytime you run virtuoso):

```
source bashrc-64
```

Run virtuoso:

```
virtuoso &
```

## Setting up a new library:

Start the IBM Library Creation Wizard from the CIW:

IBM\_PDK → Library → Create

Library:

Create a new library in your library folder.

Technology File:

Reference existing technology libraries

→ cmrf8sf (leave other options as the default)

## Layout:

Viewing all metal layers:

Options → Display

Display Levels:

Start: 0

Stop: 6

Turn off Gravity:

Options → Editor

Gravity Controls:

Gravity On: Uncheck

Types: Check none

## Simulations:

You must connect a  $vdc = 1.2V$  between VDD and GND for simulations to work.

