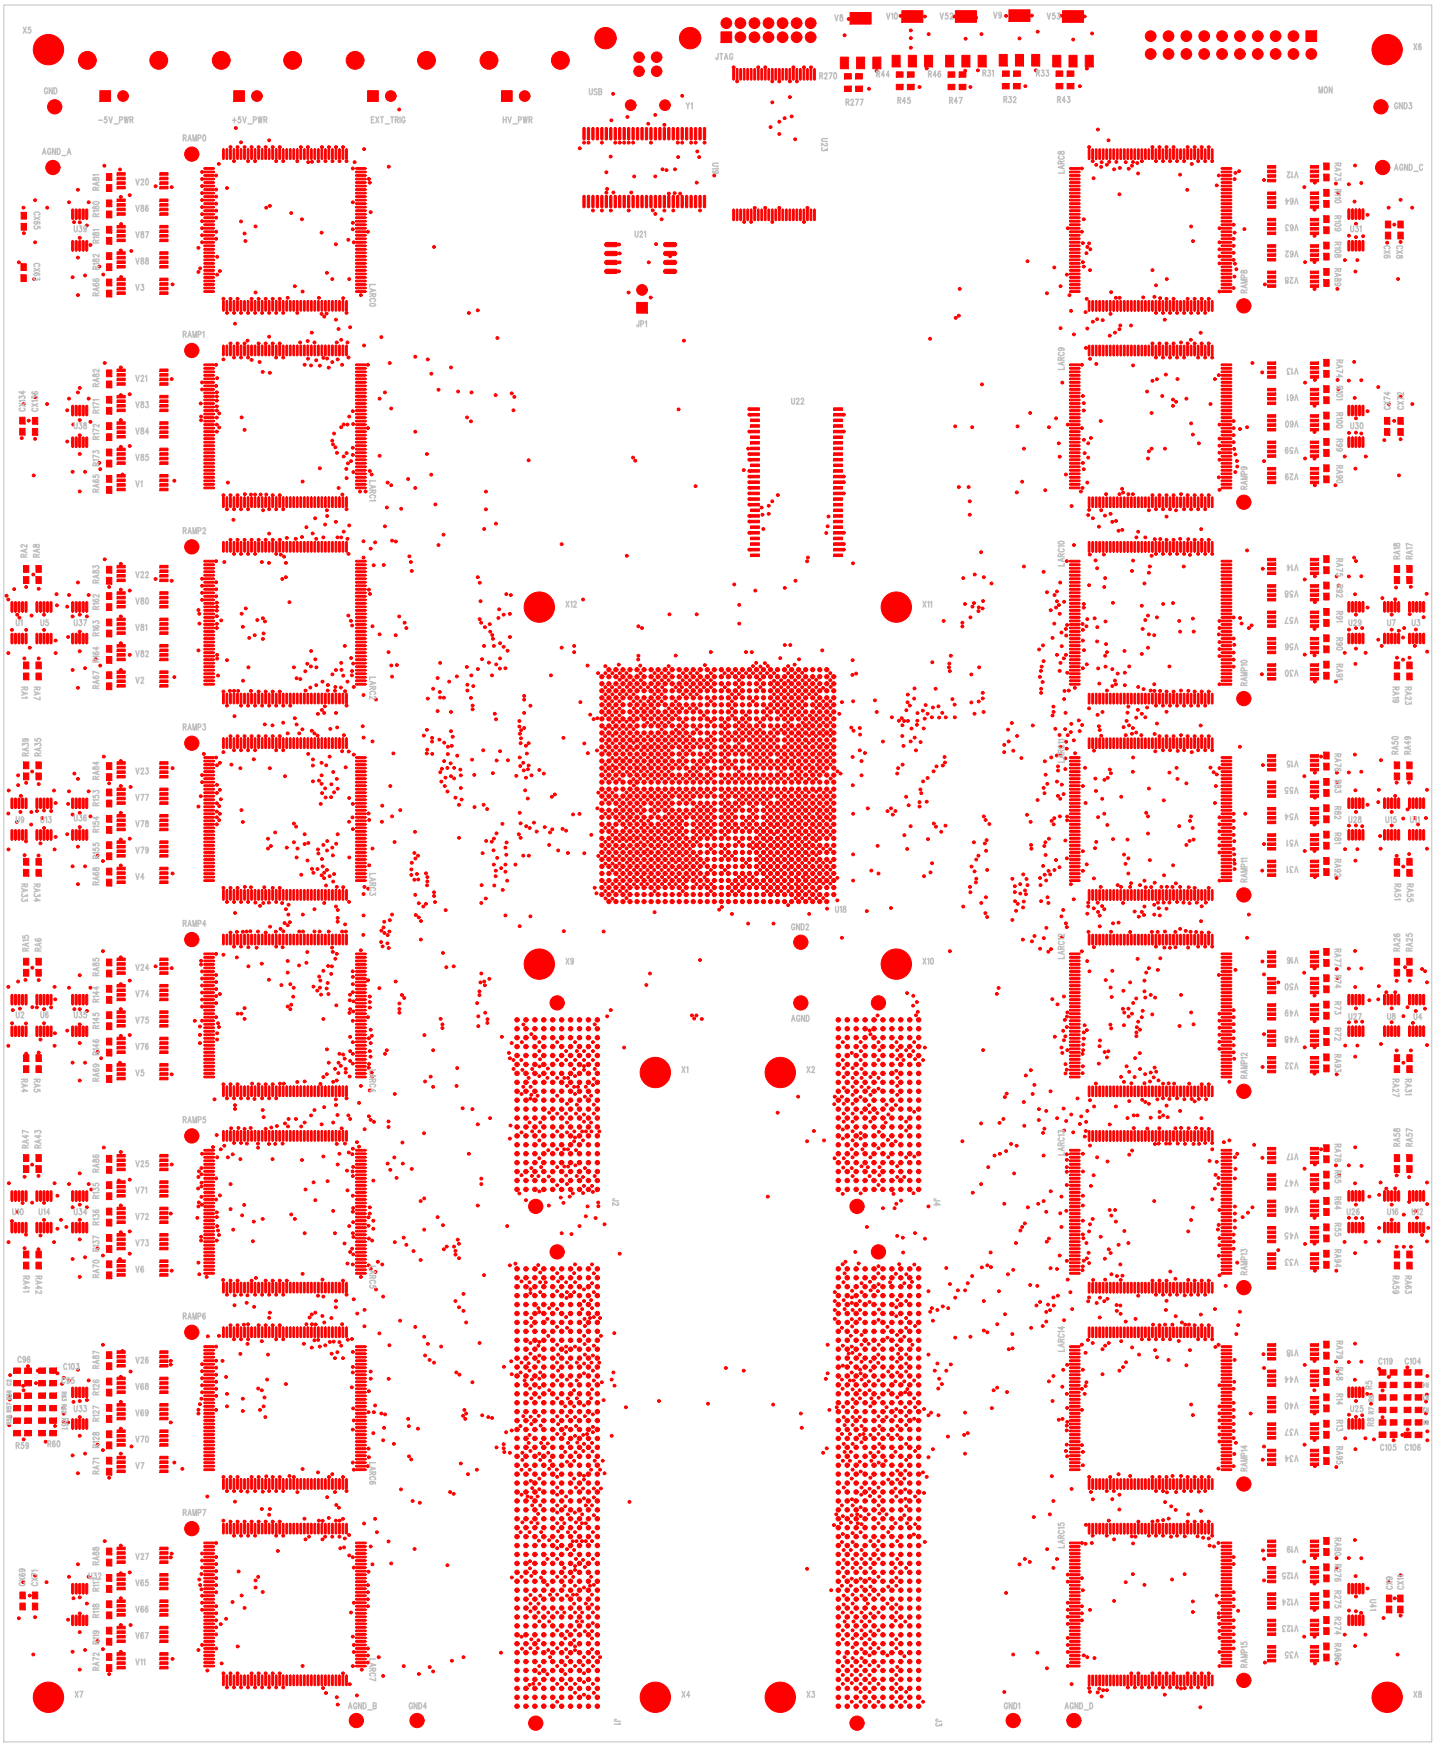

X5
GND
-5V_PWR
+5V_PWR
EXT_TRIG
HV_PWR
USB
JTAG
Y1
U21
JP1
U22
U18
GND2
AGND
X1
X2
X3
X4
X6
MON
GND3
AGND_C
AGND_A
AGND_B
GND4
GND1
AGND_D
X7
X8
X9
X10
X11
X12